


SECTION VI PARTS LIST


T-500 INDEX

	Page		Page
Console (524C) Front View	6-3	Console — Top Front View	6-5
Top Panel & Rhythm Assembly		Music Light Assembly	
Top Panel Assembly		Music Light Lens	
Music Panel		Canopy Switch	
Glass Panel		Rhythm Unit Assembly	
Metal Inlay		Light Emitting Diode	
Upper Manual & Control Assembly		Rocker Switch (Silent/Sound)	
Lower Manual Assembly		Push Button Knobs	
Lower Manual Terminal Cover		Potentiometers & Knobs	
Case Assembly		Toggle Switches & Rocker Tabs	
Baffle & Grill Assembly		Control Panel Assembly	
Bench Assembly		Control Panel	
Cassette		Potentiometer & Knob	
		Line Switch (A.C.)	
		Light Lens	
Console (582C) Front View	6-3	Upper Manual Assembly	
Top Panel & Rhythm Assembly		Right Hand Endblock	
Top Panel Assembly		Tonebar Assembly	
Music Panel		Stop Switch Base	
Upper Manual & Control Assembly		Front Strip	
Lower Manual Assembly		Lower Manual Assembly	
Lower Manual Terminal Cover		Endblock & Rocker Switch Assembly	
Case Assembly		Cassette	
Baffle & Grill Assembly			
Bench Assembly			
Cassette			
		Console — Rear View, Tremolo Open	6-5
Console (595C) Front View	6-4	Control Cover	
Top Panel & Rhythm Assembly		Music Light Cable & Plug Assembly (P605)	
Top Panel Assembly		Generator & Motor Assembly	
Music Panel		Generator Cable Assembly	
Upper Manual & Control Assembly		Speakers	
Lower Manual Assembly		Crossover Network Assembly	
Lower Manual Terminal Cover		Reverberation Unit Assembly	
Case Assembly		Drum Scanner Assembly	
Baffle & Grill Assembly		Power & Reverberation Amplifier Assembly	
Bench Assembly			
Cassette			
		Tone Wheel Generator — Rear View	6-6
Console — Rear View	6-4	Scanner Pulley	
Music Rack Hinge		“O” Ring	
Control Cover		Motor Coupler	
Vibrato Line Box		Coupler Spring	
Tremolo Bracket			
Tremolo Hinge		Console — Rear View, Top	6-6
		Switch Panel & Component Assemblies (1 thru 6)	
		Line Switch	
		Pilot Lamp	


	Page		Page
Console – Rear View, Top (Continued)	6-6	Power Amplifier & Supply – Top View	6-11
Lower Manual Bus Amplifier Board Assembly		Power Transformers	
Upper Manual Bus Amplifier Board Assembly		Power & Reverberation Amplifier Board	
Recovery & Non Vibrato Amplifier Board Assembly		Pedal Filter & Divider Board	
Vibrato Amplifier Board Assembly		Fuses	
Percussion Board Assembly		Electrolytic Capacitors	
Auto Chord Board Assembly			
Connector & Terminal Pins (Auto Chord Board)			
Control Panel – Right Half Front View	6-7	Power Amplifier & Supply – Bottom View	6-12
Stop Finger Assemblies		Relay – Tremolo	
Control Panel – Left Half Front View	6-7	Zener Diode 15V.	
Stop Finger Assemblies		Filter Choke	
Synchronous Motors			
Endblock Assembly – Top View	6-8	Pedal Keyboard & Switch Assembly – Top View . . .	6-12
Endblock – Lower Left Hand		Pedal Keyboard Assembly	
Rocker Tabs		Cable Assemblies	
Endblock Assembly – Bottom View	6-8	Grommet	
Rocker Switch Bracket & Lug Assembly		Pedal Assembly – Long & Short	
Over Center Spring			
Rocker Switch Frame Assembly		Pedal Keyboard & Switch Assembly – Top View,	
Resistors & Capacitors		Disassembled	6-13
Manual Assembly – Upper or Lower, Disassembled . .	6-9	Pedal Keyer Boards	
Bus Bar Sets (Upper & Lower)		Key Channel – Long & Short	
Bus Bar Shifter Assembly		Pedal Caps – Long & Short	
Switch Spring Assemblies		Extension Springs	
Contact Spring Holder (Long & Short)		Down Stop Bumpers	
Manual Key Disassembled	6-9	Pedal Keyboard & Switch Assembly – Bottom View .	6-13
Playing Keys		Guide & Switch Bracket Assembly	
Key Combs			
Key Channels			
Tonebar Assembly – Top View	6-10	Swell Pedal – Disassembled	6-14
Tonebar Assemblies		Base	
Tonebar Knobs		Photo Cell	
Tonebar Assembly – Bottom View	6-10	Photo Cell Adapter	
Printed Network Assemblies		Diffuser Lens	
Tonebar – Disassembled		Socket	
Tonebar Assembly – Pedal	6-11	Photo Cell Cover	
Pedal Mounting Block Assembly		Shutter	
Clamp Spring		Pedal	
Pedal Tonebar Assembly		Rubber Mat	
Contact Spring Assembly		Side Switch & Contacts	
Resistor			
		Rhythm III	6-15
		Voicing Board Assembly	
		Timing Generator Board Assembly	
		Rhythm Selector Board Assembly	

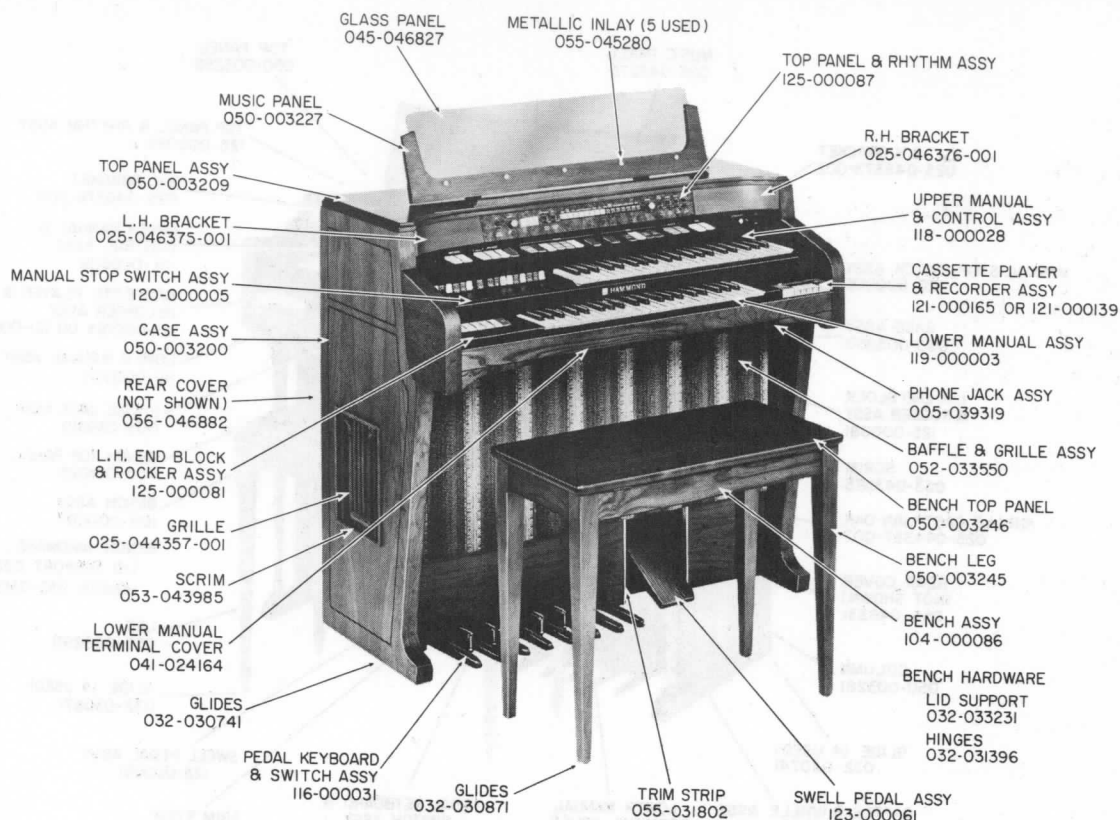


Console (524C) Front View

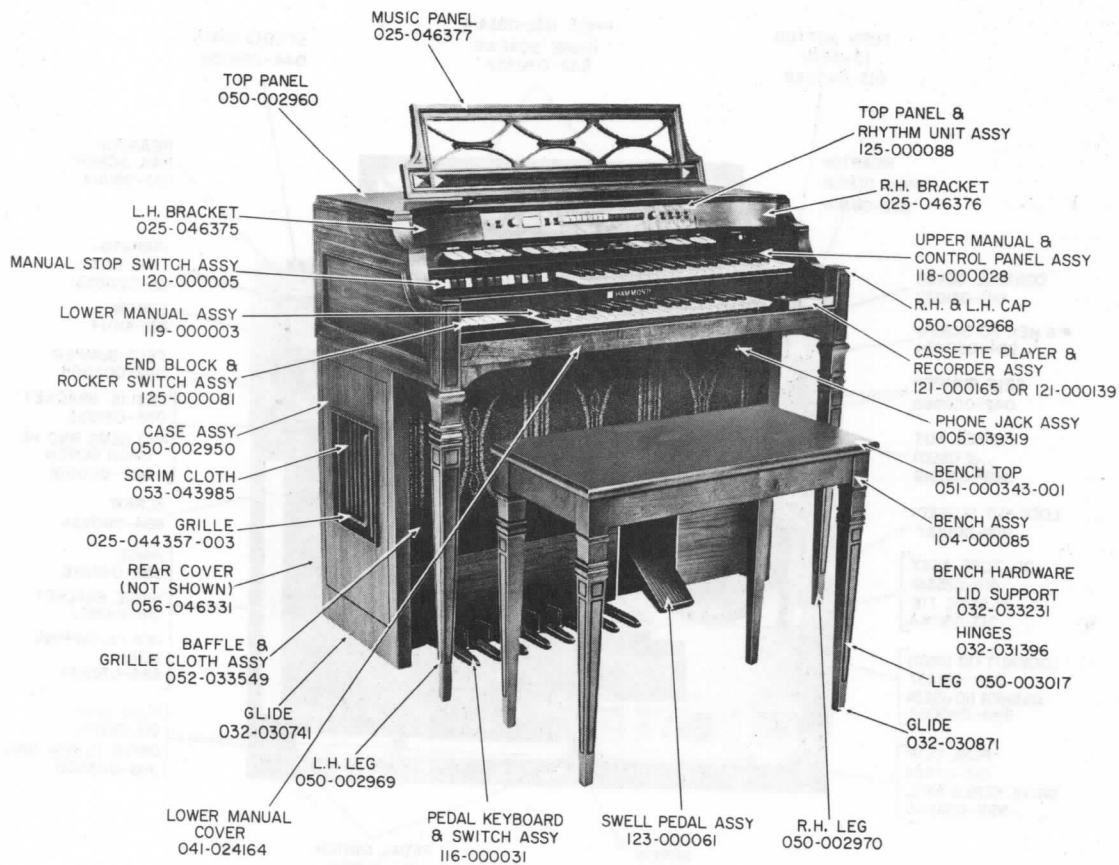


Console (582C) Front View

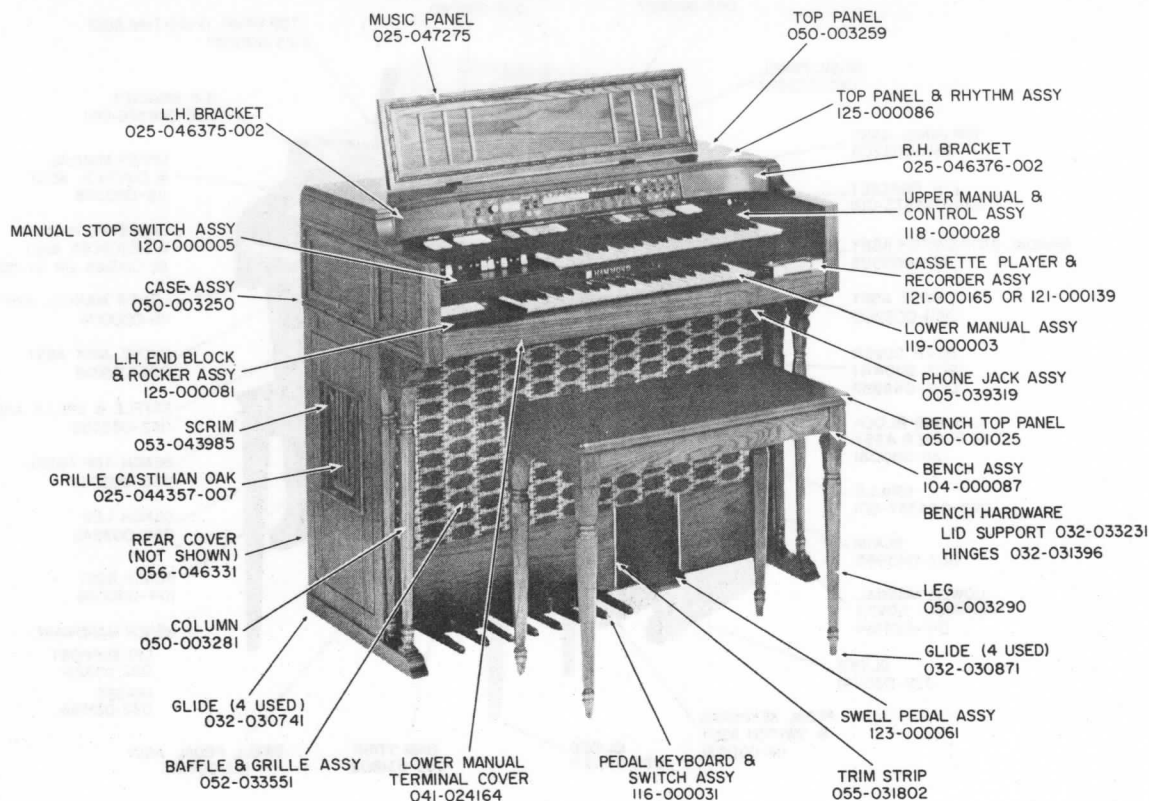


Console (595C) Front View

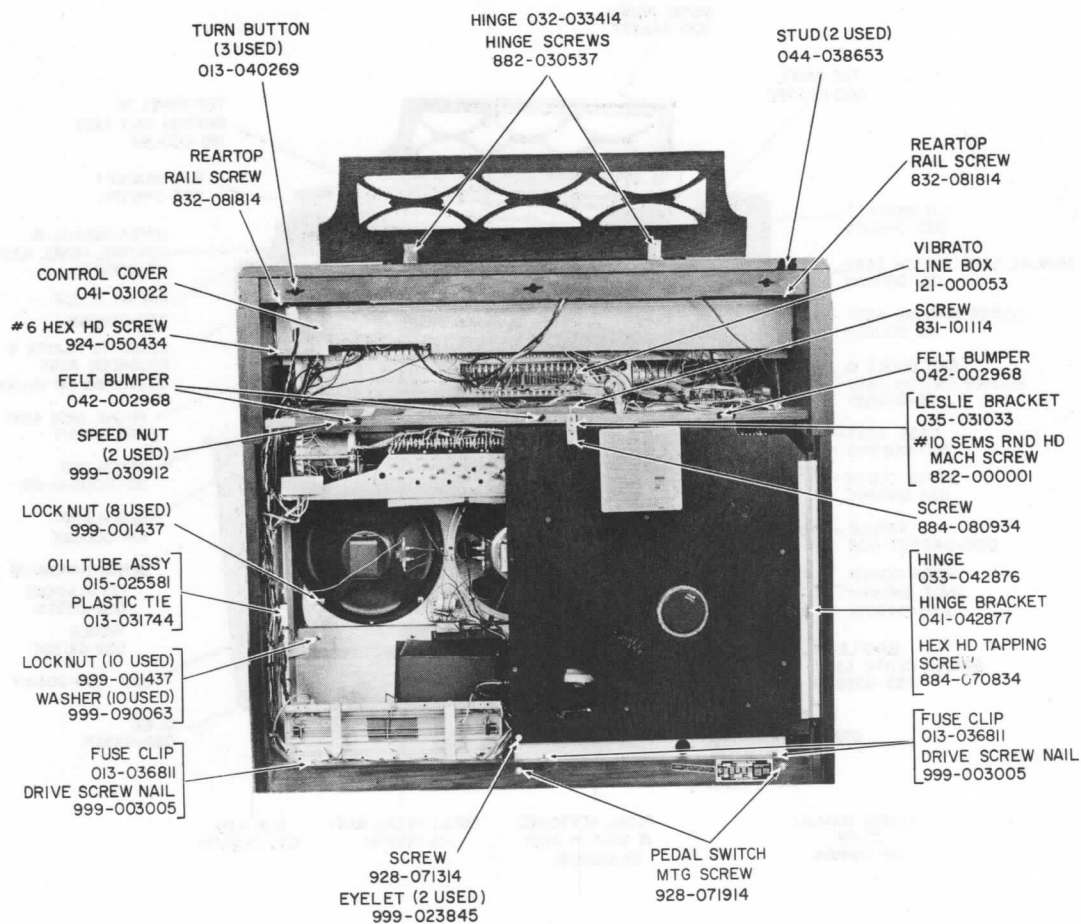


Console - Rear View

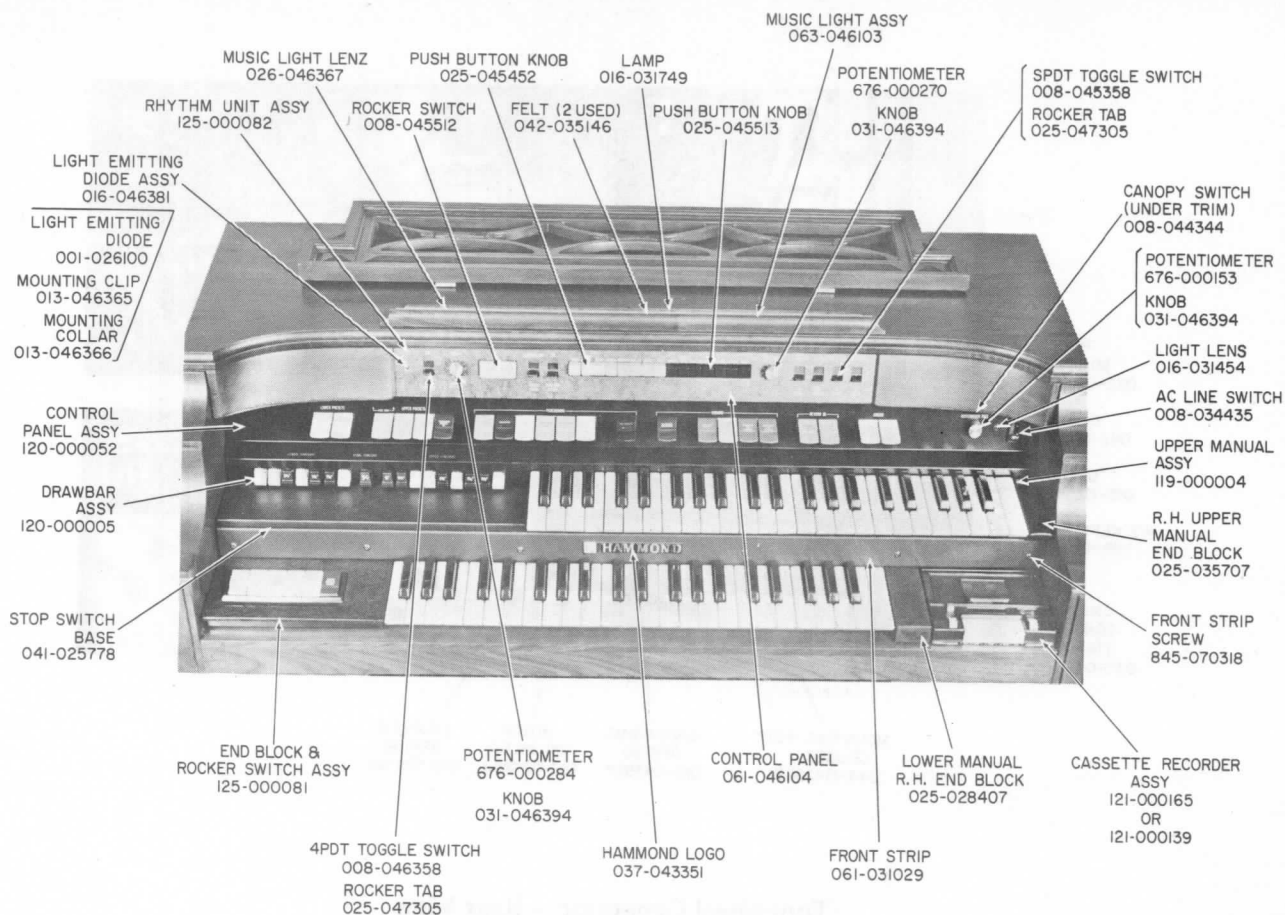


Console – Top Front View


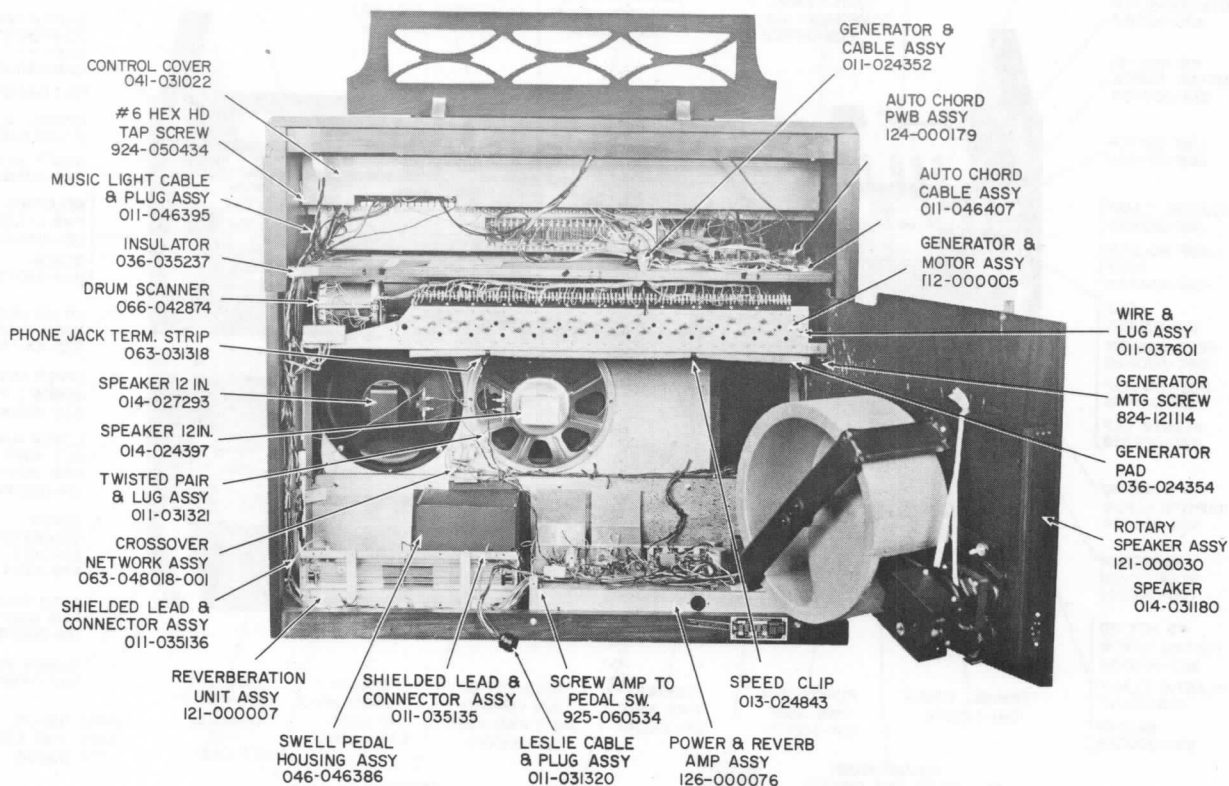


Console – Rear View, Tremolo Open

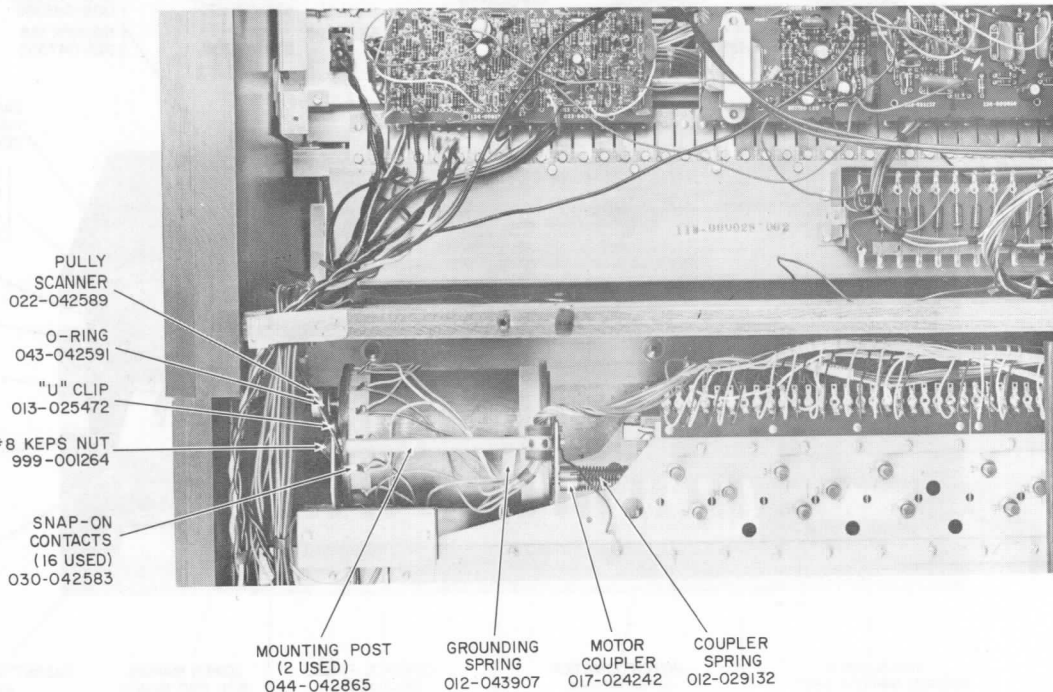


Tonewheel Generator – Rear View

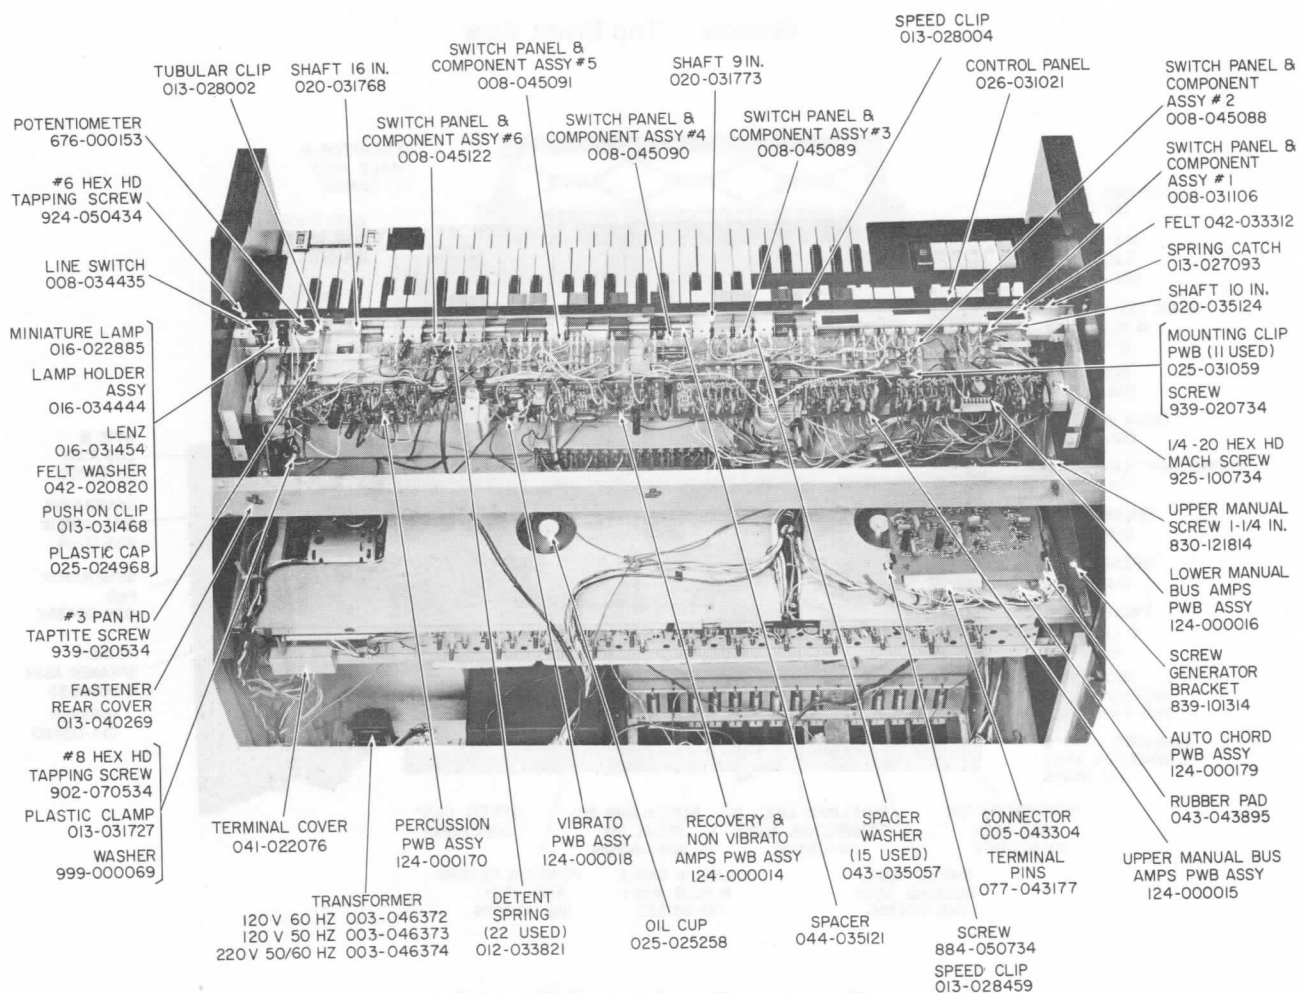


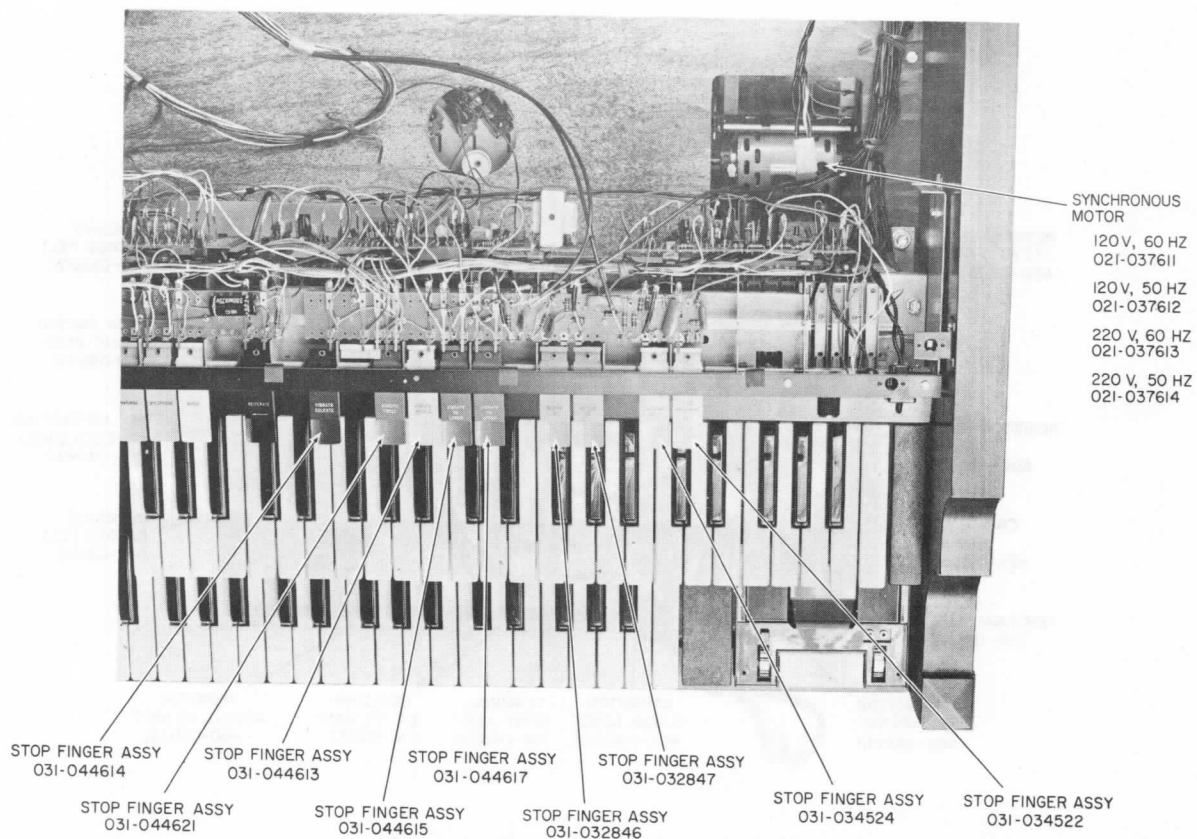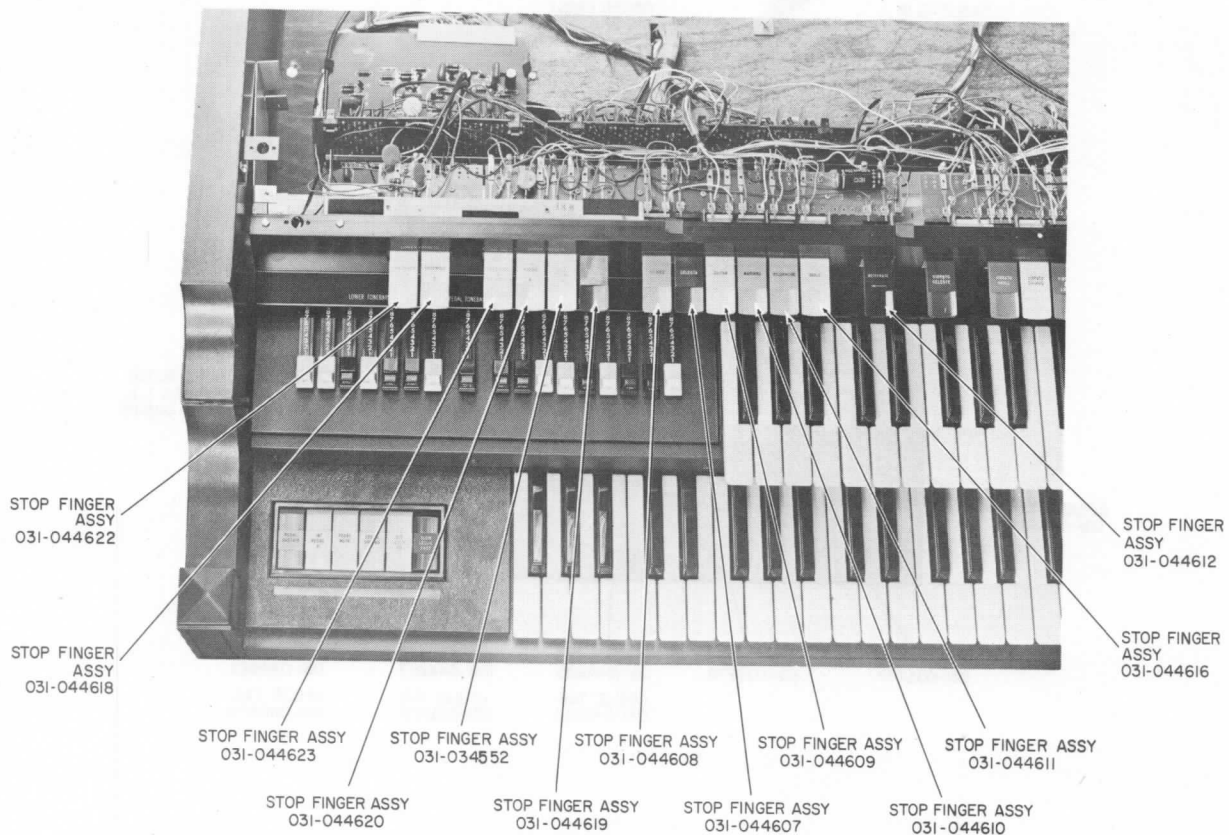

Control Panel – Left Half Front View

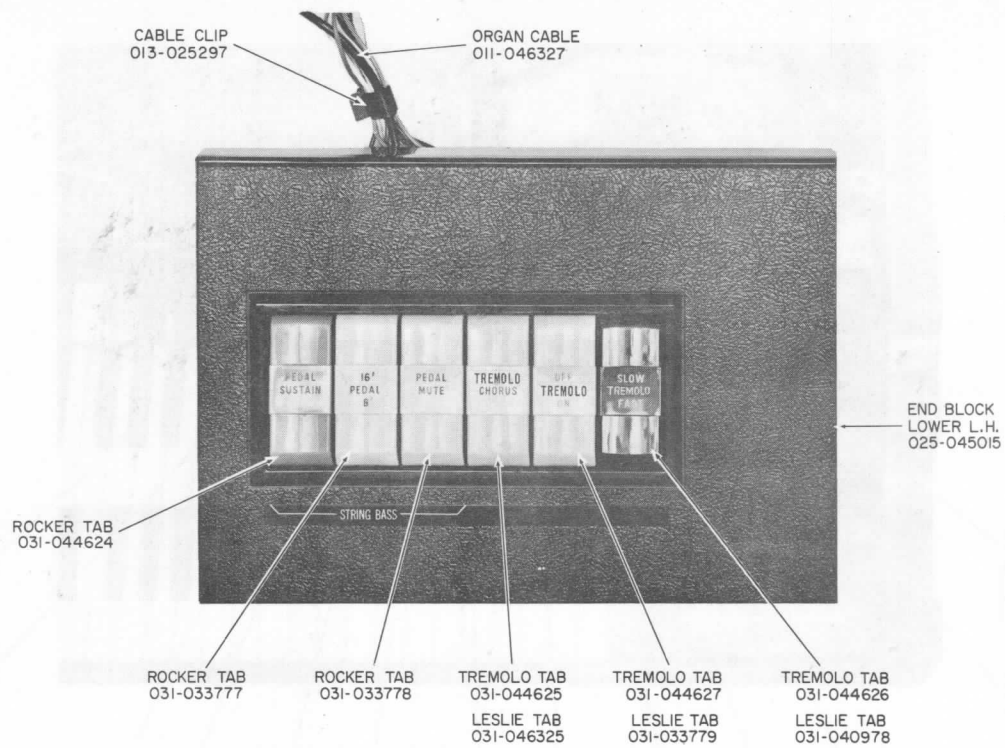


Endblock Assembly – Top View

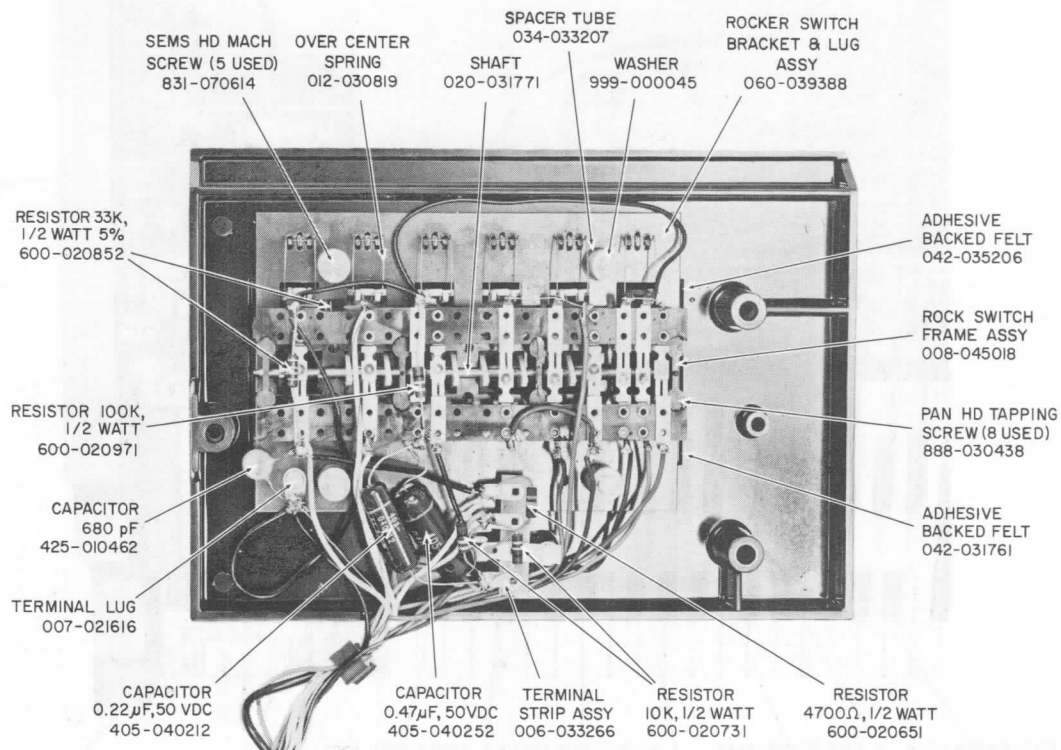


Endblock Assembly – Bottom View

029-034031 UPPER MANUAL
CONSISTS OF:
029-034028 WHT/ORN
029-034027 WHT
029-034026 GRAY
029-034025 VIO
029-034024 BLUE
029-034023 GRN
029-034022 YEL
029-034021 ORN
029-034020 RED
029-034019 BROWN


029-034029 LOWER MANUAL
CONSISTS OF:
029-034018 WHT/ORN
029-034017 VIO
029-034016 BLUE
029-034015 GRN
029-034014 YEL
029-034013 ORN
029-034012 RED
029-034011 BROWN

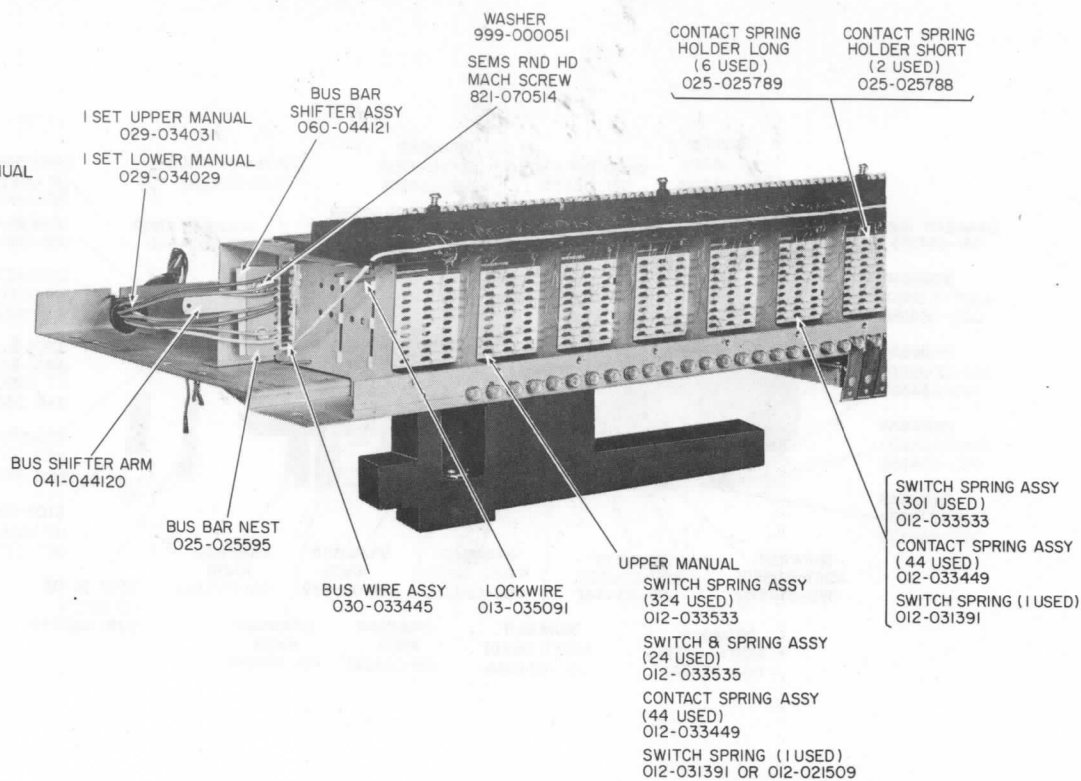


Manual Assembly – Upper or Lower, Disassembled

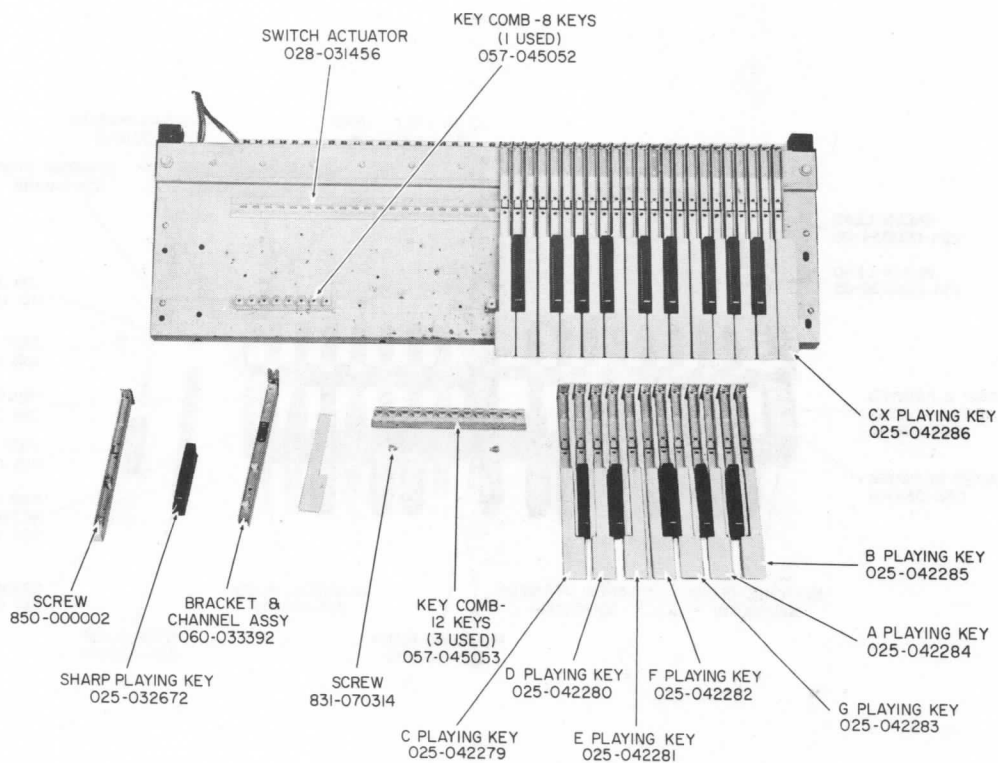


Manual Keys, Disassembled

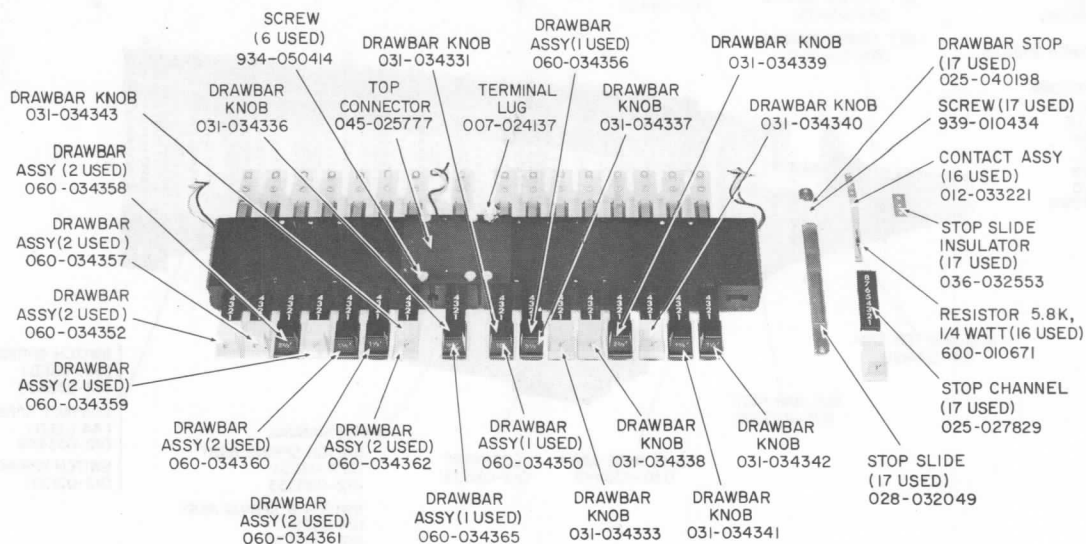


Tonebar Assembly – Top View

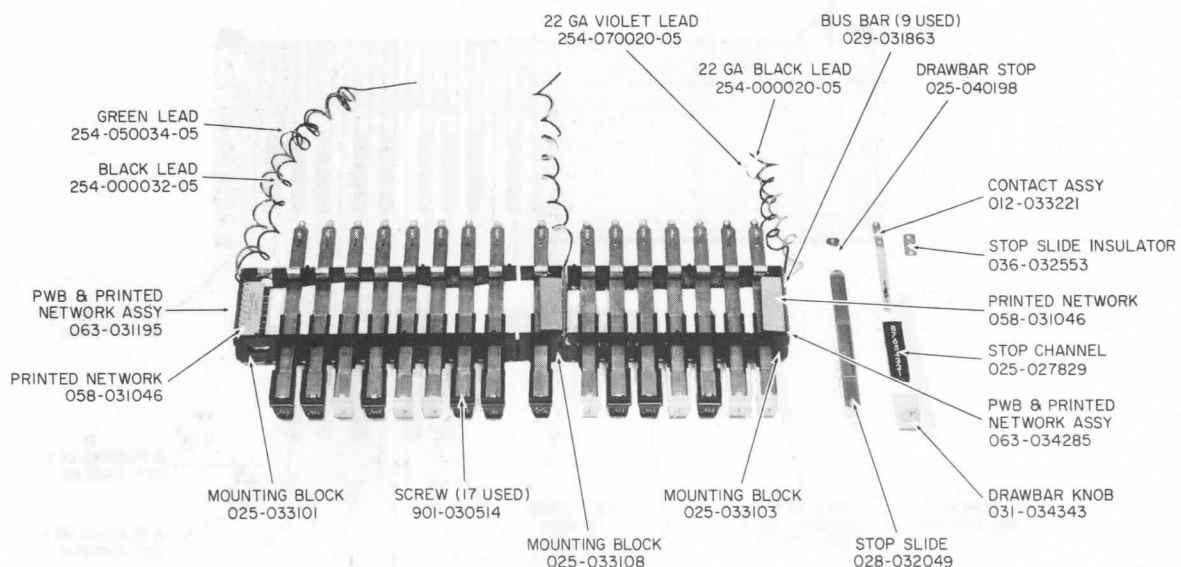


Tonebar Assembly – Bottom View

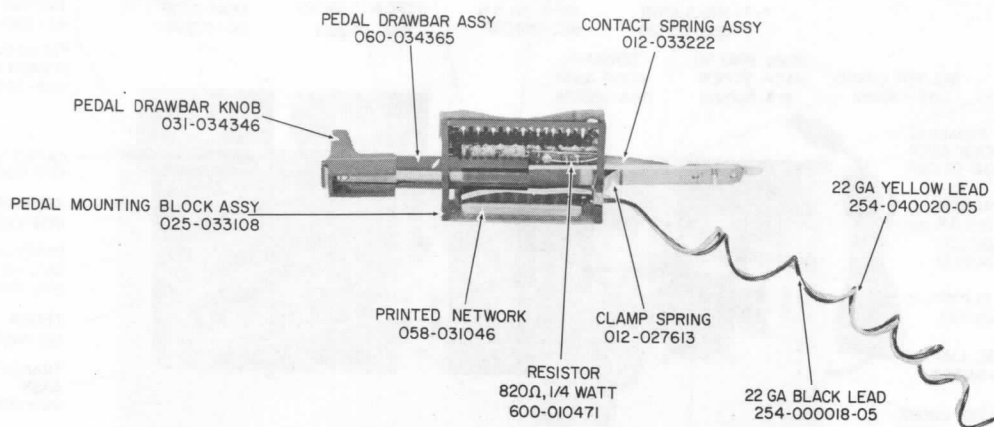


Tonebar Assembly - Pedal

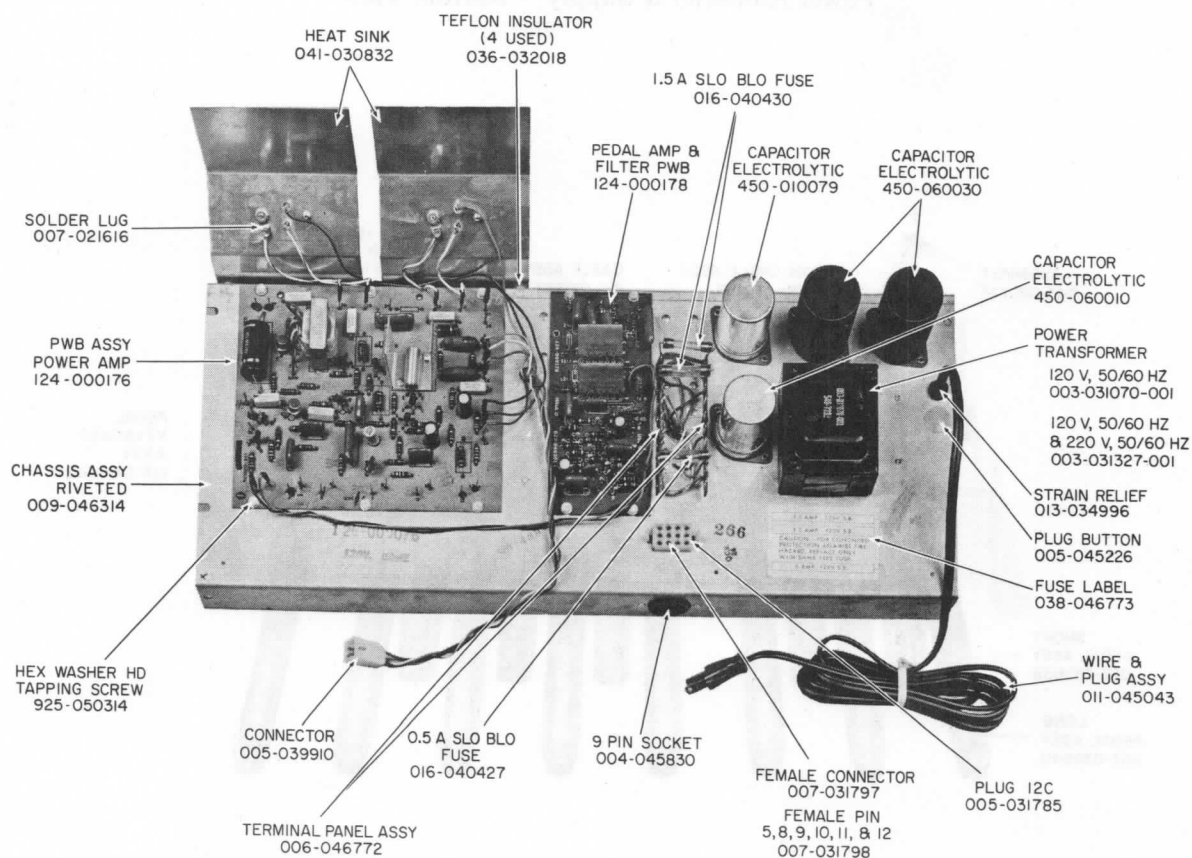


Power Amplifier & Supply - Top View

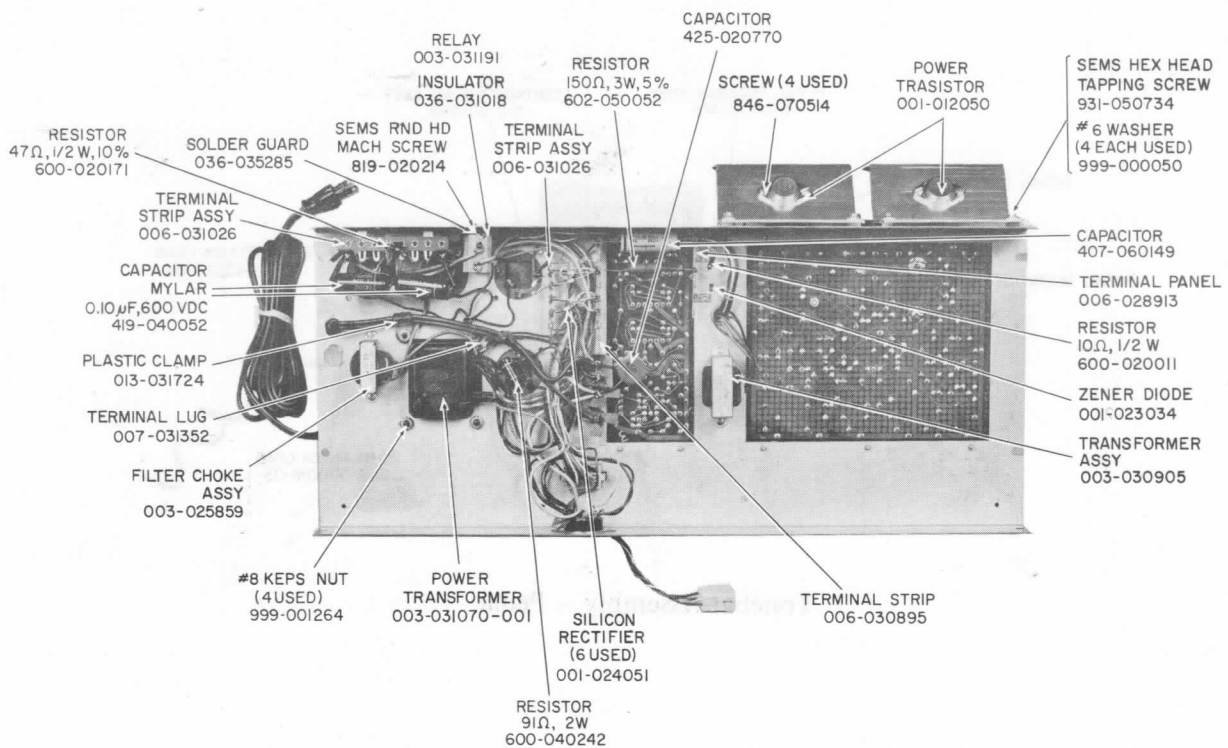


Power Amplifier & Supply – Bottom View

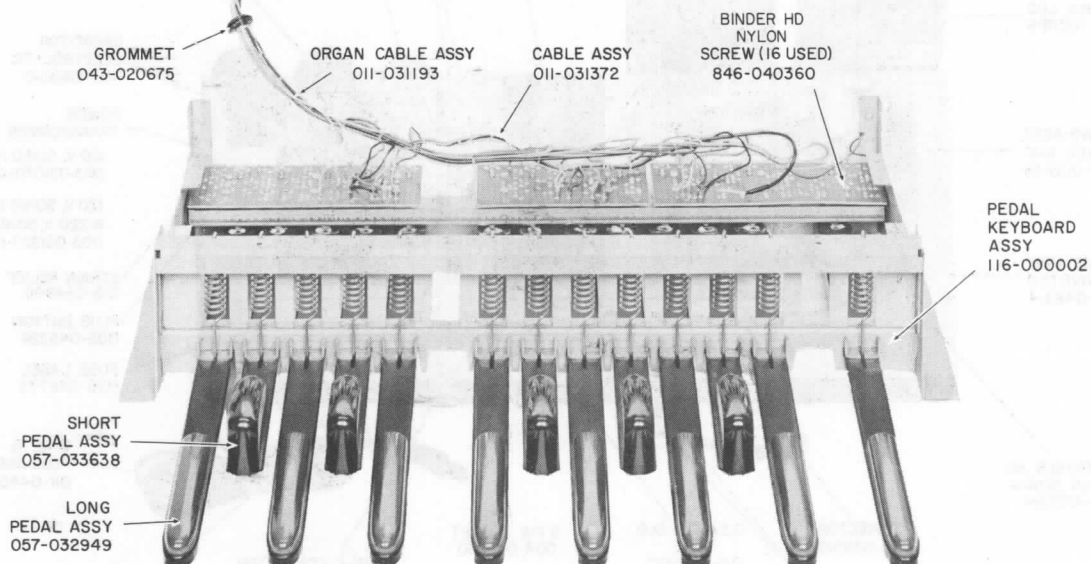


Pedal Keyboard & Switch Assembly – Top View

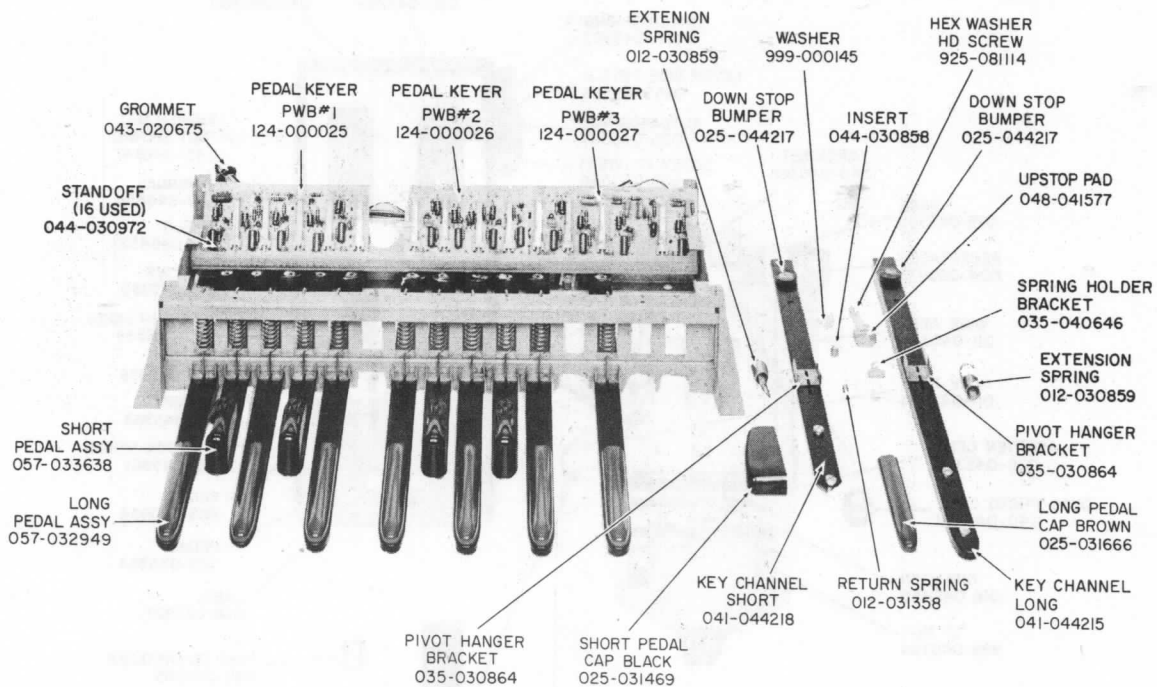


Pedal Keyboard & Switch Assembly – Top View, Disassembled

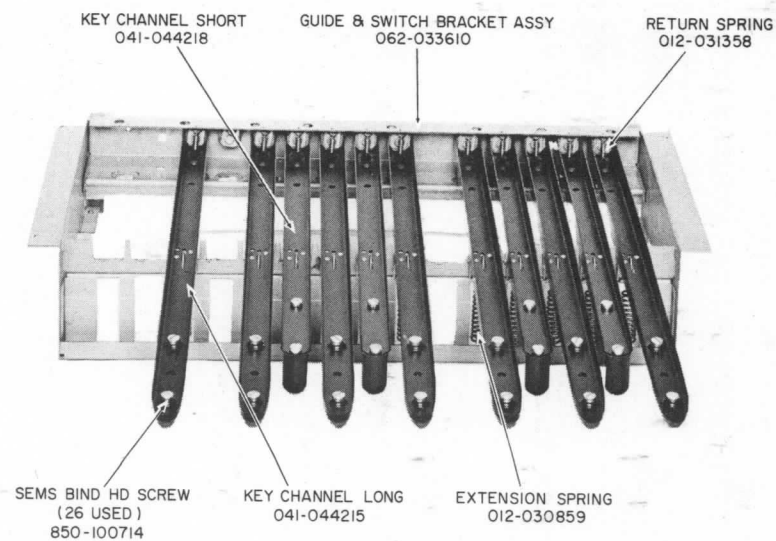

Pedal Keyboard & Switch Assembly – Bottom View

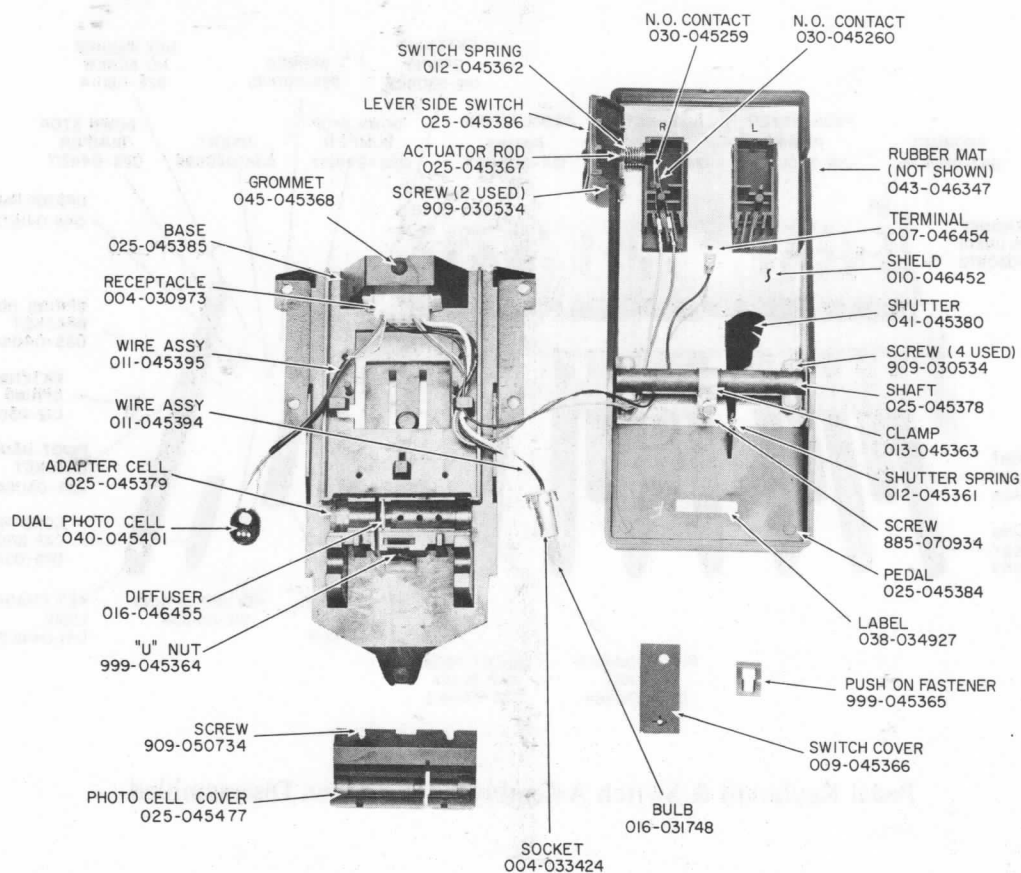

Expression Pedal – Disassembled

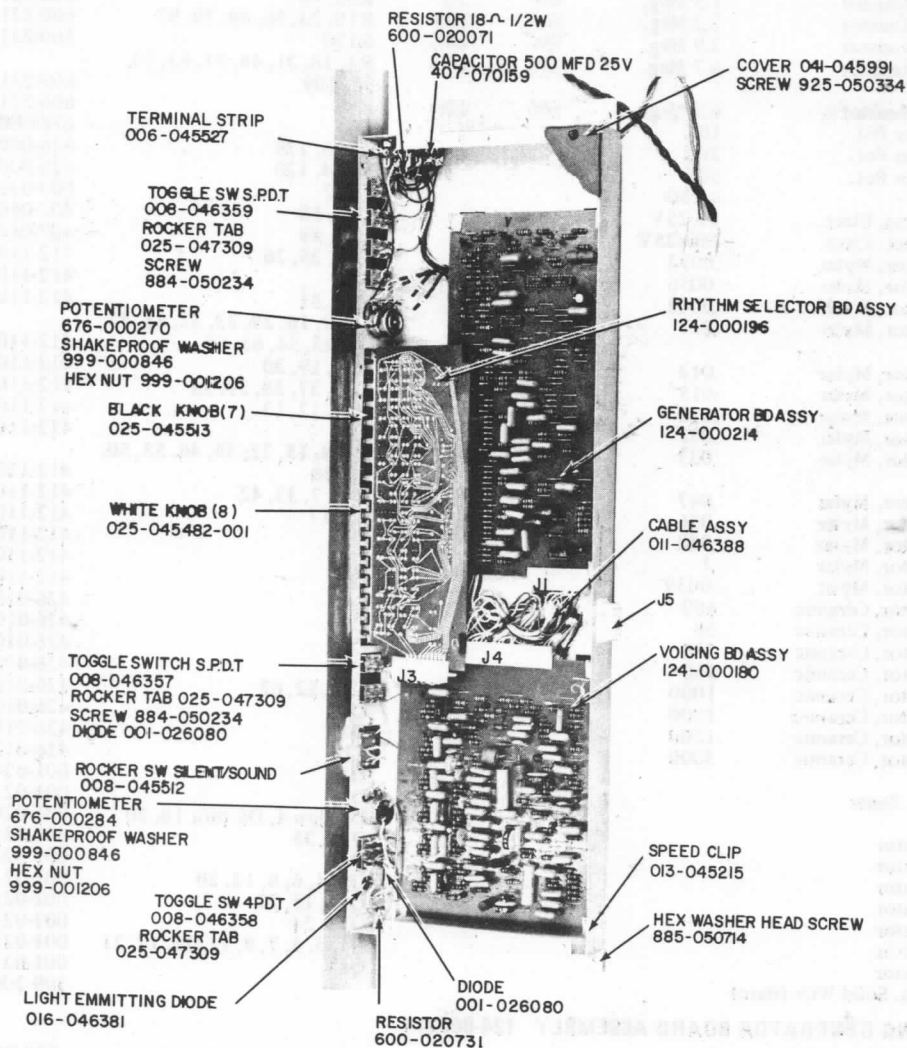

Rhythm III

VOICING BOARD ASSEMBLY (RHYTHM III) 124-000180

Printed Wiring Board					
Fixed Resistor	68 Ohms	1/2W	10%	R87	023-046338
Fixed Resistor	330 Ohms	1/2W	10%	R67	600-220211
Fixed Resistor	470 Ohms	1/2W	10%	R114	600-220371
Fixed Resistor	820 Ohms	1/2W	10%	R13, 26, 39, 82, 94, 52	600-220411
Fixed Resistor	1500 Ohms	1/2W	10%	R117	600-220471
Fixed Resistor	2200 Ohms	1/2W	10%	R66	600-220531
Fixed Resistor	4700 Ohms	1/2W	10%	R93, 102, 118	600-220571
Fixed Resistor	5600 Ohms	1/2W	10%	R112, 128	600-220651
Fixed Resistor	10K	1/2W	10%	R12, 25, 38, 51, 81, 100, 119	600-220671
Fixed Resistor	22K	1/2W	5%	R8, 21, 22, 34, 35, 47, 48, 76, 77	600-220731
Fixed Resistor	27K	1/2W	5%	R9, 125, 127	600-220812
Fixed Resistor	39K	1/2W	10%	R105, 121	600-220832
Fixed Resistor	47K	1/2W	10%	R59, 65, 75, 113, 122, 123, 124, 93	600-220871
Fixed Resistor	47K	1/2W	5%	R2, 16, 29, 42, 71, 89, 107	600-220891
Fixed Resistor	68K	1/2W	5%	R11, 24, 37, 50, 80	600-220892
Fixed Resistor	100K	1/2W	10%	R1, 3, 15, 17, 28, 30, 41, 43, 54, 56, 60, 62, 70, 72, 88, 90, 101, 106, 108, 126	600-220932
Fixed Resistor	120K	1/2W	10%	R61	600-220971
Fixed Resistor	150K	1/2W	5%	R5, 19, 32, 45, 64, 58, 74, 92, 110	600-220991
Fixed Resistor	180K	1/2W	5%	R99	600-221012
Fixed Resistor	82K	1/2W	10%	R55	600-221032
Fixed Resistor	330K	1/2W	5%	R14, 7, 103	600-220951
Fixed Resistor	470K	1/2W	10%	R69, 84, 95, 111	600-221092
Fixed Resistor	56K	1/2W	5%	R115	600-221131
Fixed Resistor	560K	1/2W	5%	R40	600-220912
Fixed Resistor	680K	1/2W	5%	R33, 46, 78, 27, 53	600-221152
Fixed Resistor	820K	1/2W	10%	R20	600-221172
Fixed Resistor	1.0 Meg.	1/2W	10%	R68	600-221191
					600-221211

Fixed Resistor	1.2 Meg.	½W	10%	R6	600-221231
Fixed Resistor	1.5 Meg.	½W	5%	R83, 96	600-221252
Fixed Resistor	2.2 Meg.	½W	10%	R10, 23, 36, 49, 79, 97	600-221291
Fixed Resistor	3.9 Meg.	½W	10%	R130	600-221351
Fixed Resistor	4.7 Meg.	½W	10%	R4, 18, 31, 44, 57, 63, 73, 91, 109	600-221371
Fixed Resistor	6.8 Meg.	½W	10%	R85	600-221411
Trimmer Pot.	10K			R86	676-000064
Trimmer Pot.	20K			R116, 129	676-000065
Trimmer Pot.	50K			R104, 120	676-000069
Choke	45 Mh			L1, 2	003-030753
Capacitor, Elect.	10/25 V			C56, 58	407-060519
Capacitor, Elect.	200/25 V			C57, 59	407-060489
Capacitor, Mylar	.0012			C24, 25, 26	412-110582
Capacitor, Mylar	.0056			C31	412-110692
Capacitor, Mylar	.0082			C30, 51	412-110602
Capacitor, Mylar	.01			C2, 9, 16, 29, 23, 32, 35, 47, 41, 43, 54, 63, 65	412-110462
Capacitor, Mylar	.012			C18, 19, 20	412-110612
Capacitor, Mylar	.015			C36, 37, 38, 39, 55	412-110472
Capacitor, Mylar	.022			C11, 12, 13	412-110482
Capacitor, Mylar	.027			C48	412-110492
Capacitor, Mylar	.033			C1, 8, 15, 22, 34, 46, 53, 50, 60, 28	412-110502
Capacitor, Mylar	.047			5, 6, 7, 33, 42	412-110512
Capacitor, Mylar	.056			C3, 17	412-110622
Capacitor, Mylar	.068			C10	412-110632
Capacitor, Mylar	.1			C49	412-110522
Capacitor, Mylar	.0039			C61	412-110682
Capacitor, Ceramic	680			C44	426-010462
Capacitor, Ceramic	68			C45	426-010212
Capacitor, Ceramic	330			C27	426-010372
Capacitor, Ceramic	560			C40	426-010442
Capacitor, Ceramic	1000			C21, 52, 62	426-010502
Capacitor, Ceramic	1200			C64	426-010522
Capacitor, Ceramic	1500			C4	426-010542
Capacitor, Ceramic	3000			C14	426-010622
Diode				D19	001-024050
Diode, Zener				D5	001-023038
Diode				D1 thru 4, D6 thru 18, 20	001-026080
Transistor				Q19, 25	001-021070
Transistor				Q18	001-021133
Transistor				Q2, 4, 6, 8, 12, 20	001-021134
Transistor				Q14, 15, 22	001-021135
Transistor				Q23, 24	001-021172
Transistor				Q1, 3, 5, 7, 9, 11, 16, 17, 21	001-021173
Transistor				Q13	001-021211
#20 Ga. Solid Wire (Bare)					299-200002

TIMING GENERATOR BOARD ASSEMBLY 124-000214

Printed Wiring Board					023-046403
Fixed Resistor	100 Ohms	½W	5%	R76	600-220252
Fixed Resistor	180 Ohms	3W	10%	R22	602-050201
Fixed Resistor	270 Ohms	½W	10%	R15	600-220351
Fixed Resistor	1800 Ohms	½W	5%	R2	600-220552
Fixed Resistor	3600 Ohms	½W	5%	R4, 59	600-220622
Fixed Resistor	4700 Ohms	½W	10%	R20, 18	600-220651
Fixed Resistor	6800 Ohms	½W	10%	R6, 7, 14, 72	600-220691
Fixed Resistor	12K	½W	10%	R60	600-220751
Fixed Resistor	15K	½W	10%	R19, 13, 21, 73	600-220771
Fixed Resistor	22K	½W	10%	R8, 5	600-220811
Fixed Resistor	27K	½W	10%	R62	600-220831
Fixed Resistor	33K	½W	10%	R54, 55, 56, 3, 57	600-220851
Fixed Resistor	39K	½W	10%	R24, 25, 58	600-220871
Fixed Resistor	47K	½W	10%	R17, 29, 30, 11, 12, 61	600-220891
Fixed Resistor	22 Ohms	½W	10%	R77	600-220091
Fixed Resistor	91K	½W	5%	R1	600-220962
Fixed Resistor	100K	½W	10%	R27, 28, 10	600-220971
Fixed Resistor	150K	½W	10%	R9, 16, 63, 74, 75, 65 thru 71 (except R68)	600-221011
Fixed Resistor	470K	½W	10%	R23, 26, 31 thru 53	600-221131
Fixed Resistor	10K	½W	10%	R64, 68	600-220731
Capacitor, Mylar	.01 mfd			C2, 34, 4	412-110462
Capacitor, Mylar	.039 mfd			C7, 8, 11 thru 33	412-110652
Capacitor, Mylar	.068 mfd			C35	412-110632
Capacitor, Mylar	.15 mfd			C6	412-110642
Capacitor, Mylar	.22 mfd			C9, 10, 5	412-110532
Capacitor, Min. Elect.	.47 mfd			C1	414-240052
Capacitor	50/15V			C3	407-040439
Transistor				Q5, 3, 7, 8, 9, 2	001-021133
Transistor				Q6, 4	001-021135
Transistor				Q1	001-026050
Transistor				Q10	001-021172
Diode				D1	001-023033
Diode				D2 thru D52	001-026080
Connector & Terminal Asy. 6 Ckt.					005-044724
Int. Circuit 14 Pin				I.C.1, I.C.2, I.C.3	075-045037
#20 Ga. Solid Wire					299-200002

RECOVERY AND NON VIBRATO AMPLIFIER BOARD ASSEMBLY 124-000014

Printed Wiring Board #3

Pin (P. C. Board)

Resistor	270Ω	
Resistor	12K	
Resistor	4.7K	
Resistor	5.6K	
Resistor	82K	
Resistor	10K	
Resistor	47K	
Resistor	33K	
Resistor	680Ω	
Resistor	560Ω	
Resistor	100K	
Resistor	470K	
Resistor	1Meg	
Resistor	1.5Meg	
Potentiometer	5K	
Capacitor, Mylar	.1mfd	100v
Capacitor, Mylar	.22mfd	100v
Capacitor, Ceramic	1500pf	500v
Capacitor, Ceramic	1800pf	500v
Capacitor, Ceramic	2700pf	500v
Capacitor, Ceramic	4700pf	500v
Capacitor, Ceramic	.02mfd	500v
Capacitor, Electrolytic	80mfd	25v
Capacitor, Tantalum	6.8mfd	25v
Transistor		
Transistor		

023-031127

007-028499

600-220351

600-220751

600-220651

600-220671

600-220951

600-220731

600-220891

600-220851

600-220451

600-220431

600-220971

600-221131

600-221211

600-221251

676-000011

413-110142

413-110162

426-010542

426-010562

426-010602

426-010662

426-010763

407-060289

414-040142

001-021070

001-021132

Capacitor, Ceramic	.02mfd	500v
Capacitor, Tantalum	15mfd	10v
Capacitor, Tantalum	1.0mfd	25v
Capacitor, Tantalum	1.5mfd	15v
Capacitor, Tantalum	2.2mfd	10v
Capacitor, Tantalum	4.7mfd	10v
Capacitor, Tantalum	3.3mfd	25v
Printed Network (Ensemble)		
Transistor		

426-010763

414-020162

414-040092

414-030102

414-020112

414-020132

414-020122

058-031148

001-021070

VIBRATO BOARD ASSEMBLY 124-000018

Printed Wiring Board #4

Pin (P. C. Board)

Transformer		
Resistor	82Ω	
Resistor	820Ω	5%
Resistor	1K	
Resistor	2.7K	
Resistor	3.3K	5%
Resistor	4.7K	
Resistor	8.2K	
Resistor	10K	
Resistor	22K	
Resistor	33K	
Resistor	47K	
Resistor	150K	
Resistor	330K	
Resistor	1Meg	
Resistor	33Meg	
Potentiometer	50K	
Capacitor, Mylar	.1mfd	100v
Capacitor, Mylar	.047mfd	100v
Capacitor, Mylar	.022mfd	100v
Capacitor, Ceramic	390pf	500v
Capacitor, Ceramic	.02mfd	500v
Capacitor, Electrolytic	20mfd	50v
Capacitor, Electrolytic	100mfd	3v
Capacitor, Electrolytic	5mfd	15v
Capacitor, Tantalum	.56mfd	25v
Transistor		
Transistor		
Transistor		
Power Transistor		

023-031128

007-028499

003-031145

600-220231

600-220472

600-220491

600-220591

600-220612

600-220651

600-220711

600-220731

600-220811

600-220851

600-220891

600-221011

600-221091

600-221211

600-221480

676-000019

413-110142

413-110112

413-110322

426-010392

426-010763

407-080353

407-010369

407-040459

414-040062

001-021070

001-021132

001-021133

001-021162

UPPER MANUAL BUS AMPLIFIER BOARD ASSEMBLY 124-000015

Printed Wiring Board #2

Pin (P. C. Board)

Resistor	82Ω	
Resistor	3.9K	
Resistor	4.7K	
Resistor	33K	
Resistor	39K	
Resistor	1Ω	
Resistor	150Ω	
Capacitor, Mylar	.01mfd	100v
Capacitor, Mylar	.047mfd	100v
Capacitor, Mylar	.082mfd	100v
Capacitor, Mylar	.1mfd	100v
Capacitor, Mylar	.15mfd	100v
Capacitor, Mylar	.025mfd	100v
Capacitor, Ceramic	1200pf	500v
Capacitor, Ceramic	1800pf	500v
Capacitor, Ceramic	2200pf	500v
Capacitor, Ceramic	2700pf	500v
Capacitor, Ceramic	3300pf	500v
Capacitor, Ceramic	4700pf	500v
Capacitor, Ceramic	.02mfd	500v
Capacitor, Tantalum	.47mfd	25v
Capacitor, Tantalum	1mfd	25v
Capacitor, Tantalum	1.5mfd	15v
Capacitor, Tantalum	2.2mfd	10v
Capacitor, Tantalum	3.3mfd	10v
Capacitor, Tantalum	4.7mfd	10v
Capacitor, Tantalum	15mfd	10v
Capacitor, Tantalum	.56mfd	25v
Printed Network (Chime)		
Printed Network (Guitar)		
Printed Network (Banjo)		
Printed Network (Theatre Brass 16')		
Printed Network (Full Tibias 16')		
Printed Network (Strings 8')		
Transistor		

023-033787

007-028499

600-220231

600-220631

600-220651

600-220851

600-220871

600-221591

600-220291

413-110072

413-110112

413-110132

413-110142

413-110152

426-010522

426-010562

426-010582

426-010602

426-010622

426-010662

426-010763

414-040052

414-040092

414-030102

414-020112

414-020122

414-020132

414-020162

414-040062

058-031174

058-031175

058-031176

058-031177

058-031178

058-031179

001-021070

PEDAL KEYS BOARD NO. 1 ASSEMBLY 124-000025

Printed Wiring Board No. 1

Miniature Pin Terminal

Fixed Resistor	1.2K	1/2W
Fixed Resistor	4.7K	1/2W
Fixed Resistor	10K	
Fixed Resistor	120K	1/2W
Fixed Resistor	150K	
Fixed Resistor	330K	1/2W
Capacitor, Mylar	.1mfd	100v
Capacitor, Ceramic	.01mfd	25v
Capacitor, Electrolytic	10mfd	15v
Diode		
Transistor		
Transistor		
Switch Assembly		
Plate Nut		
#3 Round Head Machine Screw		

023-031157

007-031196

600-220511

600-220651

600-220731

600-220991

600-221011

600-221091

413-110142

427-060085

407-040569

001-026030

001-021132

001-021133

008-031030

999-028941

816-020940

PEDAL KEYS BOARD NO. 2 ASSEMBLY 124-000026

Printed Wiring Board No. 2

Miniature Pin Terminal

Fixed Resistor	150K	1/2W
Fixed Resistor	330K	1/2W
Capacitor, Mylar	1mfd	100v
Capacitor, Ceramic	.01mfd	25v
Capacitor, Electrolytic	10mfd	15v
Diode		
Transistor		
Switch Assembly		
Plate Nut		
#3 Round Head Machine Screw		

023-031158

007-031196

600-221011

600-221091

413-110142

427-060085

407-040569

001-026030

001-021133

008-031030

999-028941

816-020940

PEDAL KEYS BOARD NO.3 ASSEMBLY 124-000027

Printed Wiring Board No. 3

Miniature Pin Terminal

Fixed Resistor	100Ω	1/2W
Fixed Resistor	22K	1/2W
Fixed Resistor	47K	1/2W
Fixed Resistor	120K	1/2W
Fixed Resistor	150K	1/2W
Fixed Resistor	330K	1/2W
Fixed Resistor	.56K	1/2W
Capacitor, Mylar	.027mfd	100v

023-031159

007-031196

600-220251

600-220811

600-220891

600-220991

600-221011

600-221091

600-220911

413-110892

LOWER MANUAL BUS AMPLIFIER BOARD ASSEMBLY 124-000016

Printed Wiring Board #1

Pin (P. C. Board)

Resistor	82Ω	
Resistor	3.9K	
Resistor	4.7K	
Resistor	33K	
Resistor	39K	
Resistor	1.0Ω	
Capacitor, Mylar	.15mfd	100v
Capacitor, Mylar	.033mfd	100v
Capacitor, Mylar	.047mfd	100v
Capacitor, Mylar	.082mfd	100v
Capacitor, Mylar	.01mfd	100v
Capacitor, Ceramic	1200pf	500v
Capacitor, Ceramic	2200pf	500v
Capacitor, Ceramic	2700pf	500v
Capacitor, Ceramic	4700pf	500v

023-031125

PERCUSSION BOARD ASSEMBLY 124-000170

Resistor, Fixed	1/2 Watt ± 10%	100Ω	R559
Resistor, Fixed	1/2 Watt ± 10%	270Ω	R504
Resistor, Fixed	1/2 Watt ± 10%	330Ω	R505, 562, 563
Resistor, Fixed	1/2 Watt ± 10%	470Ω	R517, 533, 535
Resistor, Fixed	1/2 Watt ± 10%	680Ω	R545
Resistor, Fixed	1/2 Watt ± 10%	1K	R507
Resistor, Fixed	1/2 Watt ± 10%	2200Ω	R506
Resistor, Fixed	1/2 Watt ± 5%	2200Ω	R542
Resistor, Fixed	1/2 Watt ± 10%	2700Ω	R520, 531
Resistor, Fixed	1/2 Watt ± 5%	4700Ω	R528, 543, 514
Resistor, Fixed	1/2 Watt ± 10%	5600Ω	R560, 503, 525, 510
Resistor, Fixed	1/2 Watt ± 10%	680Ω	R522, 529, 536, 524
Resistor, Fixed	1/2 Watt ± 10%	10K	R549
Resistor, Fixed	1/2 Watt ± 10%	15K	R511, 512, 550, 547, 515, 530
Resistor, Fixed	1/2 Watt ± 10%	22K	R532, 540, 541, 521, 501, 502, 551
Resistor, Fixed	1/2 Watt ± 5%	22K	R534, 518
Resistor, Fixed	1/2 Watt ± 10%	27K	R538
Resistor, Fixed	1/2 Watt ± 10%	33K	R527
Resistor, Fixed	1/2 Watt ± 10%	56K	R552
Resistor, Fixed	1/2 Watt ± 5%	56K	R508, 509
Resistor, Fixed	1/2 Watt ± 10%	100K	R544, 546
Resistor, Fixed	1/2 Watt ± 5%	120K	R553
Resistor, Fixed	1/2 Watt ± 10%	220K	R558
Resistor, Fixed	1/2 Watt ± 5%	270K	R537, 528
Resistor, Fixed	1/2 Watt ± 5%	680K	R554
Resistor, Fixed	1/2 Watt ± 10%	1M	R539
Resistor, Fixed	1/2 Watt ± 10%	1.8M	R513, 526
Resistor, Fixed	1/2 Watt ± 10%	2.7M	R548
Resistor, Fixed	1/2 Watt ± 10%	15M	R555
Trimmer Pot	5K		R556, 519
Trimmer Pot	20K		R557
Capacitor, Mylar	.015		C503
Capacitor, Mylar	.033		C513
Capacitor, Mylar	.047		C512, 507
Capacitor, Mylar	.082		C509
Capacitor, Mylar	.15		C517
Capacitor, Mylar	.22		C508, 504
Capacitor, Electrolytic	10/15V		C510
Capacitor, Electrolytic	100/15V		C501
Capacitor, Electrolytic	250/30V		C502
Capacitor, Tantalum	1/25V		C506, 505
Capacitor, Tantalum	2.2/25V		C511
Capacitor, Ceramic	100		C515
Capacitor, Ceramic	270		C516
Capacitor, Ceramic	1800		C514
Capacitor, Ceramic	.01		C518
Transistor	Q516, 513, 512, 502, 503, 508, 509		
Transistor	Q504, 507, 510, 505, 506, 515, 511,		
Transistor	Q501		
Zener Diode	D501	15 Volt	1 Watt
Silicon Diode	D505, 506, 507, 504, 510, 502, 503, 508, 509, 511		
Zener Diode	D512	.5 Volt	1 Watt
Integrated Circuit		I.C. 501	

124-000176 POWER AMPLIFIER BOARD

PWB			023-033598
Resistor	47 Ohms		600-220171
Resistor	100 Ohms		600-220251
Resistor	120 Ohms	5%	600-220272
Resistor	330 Ohms		600-220371
Resistor	560 Ohms		600-220431
Resistor	680 Ohms		600-220451
Resistor	1K Ohms		600-220491
Resistor	1.2K Ohms		600-220511
Resistor	1.5K Ohms		600-220531
Resistor	2.2K Ohms	5%	600-220572
Resistor	3.3K Ohms		600-220611
Resistor	10K Ohms		600-220731
Resistor	5.6K Ohms		600-220671
Resistor	6.8K Ohms		600-220691
Resistor	22K Ohms		600-220811
Resistor	.47K Ohms		600-220291
Resistor	.68K Ohms		600-220931
Resistor	270K Ohms		600-221071
Resistor	470K Ohms		600-221131
Resistor	820K Ohms		600-221191
Resistor	1MEG Ohms		600-221211
Resistor	2.3MEG Ohms		600-221291
Resistor	51K Ohms	5%	600-220902
Resistor	2.2K Ohms		600-221521
Resistor	3.3MEG Ohms		600-221331
Resistor	.47K Ohms	2W	600-040021
Resistor	5.6K Ohms	2W	600-040061
Resistor	120K Ohms	2W	600-040071
Resistor	.33K Ohms		600-220851
Resistor	.22K Ohms	1W	600-230091
Resistor	390K Ohms	3W 5%	600-050092
Capacitor	.068 MFD		413-110122
Capacitor	.1 MFD		413-110142
Capacitor	.22 MFD		413-110162
Capacitor	.5 MFD	25V	407-060099
Capacitor	500 MFD	30V	407-070159
Capacitor	80 MFD	25V	407-060289
Capacitor	100 MFD	3V	407-010369
Capacitor	47 PP	500V	426-010172
Transistor			001-021110
Transistor			001-021111
Transistor	NPN (Silicon)		001-021133
Heat Sink			041-028952

124-000196 RHYTHM SELECTOR BOARD ASSEMBLY

PWB			023-046097
Selector Switch			008-045753
Wafer Assembly (12 Pin)			005-046084
Resistor	10K	1/2W	600-220731
Resistor	22K	1/2W	600-220811
Resistor	27K	1/2W	600-220831
Resistor	33K	1/2W	600-220851
Diode			001-026080

124-000178 PEDAL AMP. DIV. & FILTER BOARD ASSEMBLY

PWB			023-046301
Resistor	82 Ohms	1/2W	600-220231
Resistor	47 Ohms	1/2W	600-220171
Resistor	470 Ohms	1/2W	600-220411
Resistor	390 Ohms	1/2W	600-220391
Resistor	1K	1/2W	600-220491
Resistor	1.2K	1/2W	600-220511
Resistor	4.7K	1/2W	600-220651
Resistor	10K	1/2W	600-220731
Resistor	22K	1/2W	600-220811
Resistor	47K	1/2W	600-220891
Resistor	68K	1/2W	600-220931
Resistor	82K	1/2W	600-220951
Resistor	100K	1/2W	600-220971
Resistor	330K	1/2W	600-221091
Resistor	470K	1/2W	600-221131
Resistor	680K	1/2W	600-221171
Capacitor, Mylar	.027 MFD	100V	413-110092
Capacitor, Mylar	.056 MFD	100V	413-110222
Capacitor, Mylar	.068MFD	100V	413-110122
Capacitor, Mylar	.1MFD	100V	413-110142
Capacitor, Mylar	.22MFD	100V	413-110162
Capacitor, Ceramic	1000 PF	500V	426-010502
Capacitor, Ceramic	20000PF	500V	426-010762
Capacitor, Elect	100 MFD	15V	407-040299
Capacitor, Elect	50MFD	15V	407-040439
Diode			001-226080
Transistor			001-021070
Transistor			001-021133
Printed Network			058-028540